


Sparkler Colour LED, Flexible Strip Lighting

Installers & Operators Manual


Installers Manual

1. Connect 110 – 220V/AC Mains Power to the Supplied Power Supply, as see on the picture below.
2. Connect the Controller Unit to +12V/DC of the Power Supply as indicated in the pictures below.
3. Plug the LED Strip into the LED Controller.

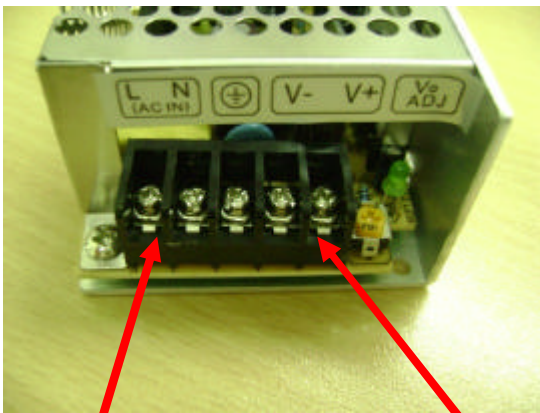

AC 110-220V/AC Input

DC 12V Output to Controller

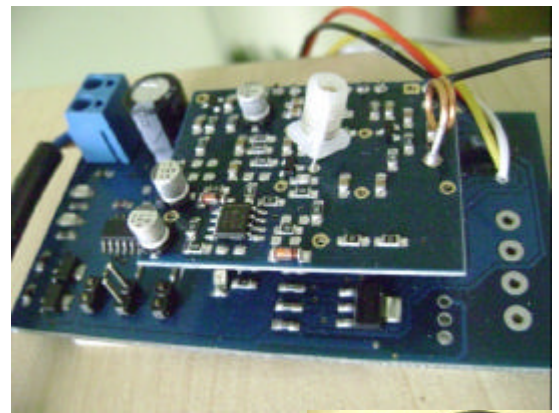

Use Top Button



Operators Manual

When Powering on the first time, the power will switch on, then switch off for 5 seconds, then switch on again. This is a power cycle to test all is operating correctly. Once complete, then it can be used. You will not be able to operate your remote while this "power cycle" is taking place.

Using the Top Button of the Remote control, you can choose each of the 13 pre-set programs. Everytime you press the button, you step forward to the next program, i.e. from program 1 to program 2 etc. The other remote buttons can be programmed to use on other products etc.

The Last of the button presses, i.e. the 13th program, is to switch it off.

Colour Settings:

1. All LED Colours ON
2. Only Red Colour ON
3. Only Green Colour ON
4. Only Blue Colour ON
5. Red and Blue ON
6. Green and Red ON
7. Fast Colour Switching
8. Slow Colour Switching
9. Fast Colour Fade and Change
10. Medium Colour Fade and Change
11. Slow Colour Fade and Change
12. Quick Colour Mover
13. Strobe Effect
14. ALL OFF