

## OPERATORS INSTRUCTIONS

### **SPARKLER COLOUR – NO REMOTE CONTROL**

1. Only Sparkler Colour LED Lights should be used with the Power Pack, RC06.
2. Each Mode gives a different effect to the pool.
3. When initiating the light for the first time, the mode on “power up” will be in the last used setting.
4. If the light is supplied without REMOTE CONTROL, it can be later used with REMOTE, by simply installing the Power Pack, RC10 afterwards.
5. To advance to the next sequence / setting, switch the power off to the lights for 1 to 2 seconds and switch power back on again.
6. If the power to the light is switched back on after 4 seconds, the light will do a complete reset to the first setting.
7. If a specific setting is used, the light is then powered off and left off for longer than 10 seconds, the next time the light is switched on, the light will do a MEMORY RECALL and activate the last setting used before the last power down occurred.
8. This prevents unnecessary searching for a commonly used setting or feature.

### **SPARKLER COLOUR – REMOTE CONTROL**

1. Operating the Light with the Remote Control is very simple.
2. By pressing the top arrow remote button, the LED Light will switch on and off.
3. To move to the next setting, press and release, the second or middle arrow button.
4. You will notice on each button press, the light switches off and then switches on to the next setting / sequence.
5. If you switch the LED Light off, by pressing the top arrow button, it is not recommended to switch the light on again within 10 seconds. This might switch the LED light/s out of synchronisation with the each other or reset, if more than 1 LED light is used on the same system.
6. If the lights are out of synchronisation, switch the power to the power pack off completely, then switch back on again after 5 seconds. This will re-initialise all the lights again to get back into complete synchronisation.

**Please see back page for colour setting / sequence list.**